

UPS Setup

Installing NUT for the OpenUPS

```
$ sudo apt-get install nut
```

Add the following to `/etc/nut/ups.conf`:

```
[openups]
  driver = usbhid-ups
  port = auto
  desc = "OpenUPS"
```

And comment out the line `maxretry = 3`.

Try if it works:

```
$ sudo upsdrvctl start
```

Then, edit `/etc/nut/nut.conf` such that the last line reads

```
MODE=standalone
```

Finally reboot and run

```
$ sudo upsc openups@localhost
```

This should display information about the connected UPS. Check the `device.model` parameter and make sure that it is OPEN-UPS

Open UPS Default Settings By Battery

LiFePo4 3 cell 9.9V 4200 mAh

```
{{ :cs:ups_setup:zippy_settings.7z |}}
```

From:

<http://robosub-old.eecs.wsu.edu/wiki/> - **Palouse RoboSub Technical Documentation**

Permanent link:

http://robosub-old.eecs.wsu.edu/wiki/cs/ups_setup/start?rev=1473558768



Last update: **2016/09/10 18:52**