

UPS Setup

Installing NUT for the OpenUPS

```
$ sudo apt-get install nut
```

Add the following to /etc/nut/ups.conf:

```
[openups]
  driver = usbhid-ups
  port = auto
  desc = "OpenUPS"
```

And comment out the line maxretry = 3.

Try if it works:

```
$ sudo upsdrvctl start
```

Then, edit /etc/nut/nut.conf such that the last line reads

```
MODE=standalone
```

Finally reboot and run

```
$ sudo upsc openups@localhost
```

This should display information about the connected UPS. Check the device.model parameter and make sure that it is OPEN-UPS

Open UPS Default Settings By Battery

To load these parameters, you will need to install the [Windows tool](#) provided by Mini-Box.

LiFePo4 3 cell 9.9V 4200 mAh

zippy_settings.7z

From:
<http://robosub-old.eecs.wsu.edu/wiki/> - Palouse RoboSub Technical Documentation

Permanent link:
http://robosub-old.eecs.wsu.edu/wiki/cs/ups_setup/start?rev=1473972669

Last update: 2016/09/15 13:51

